
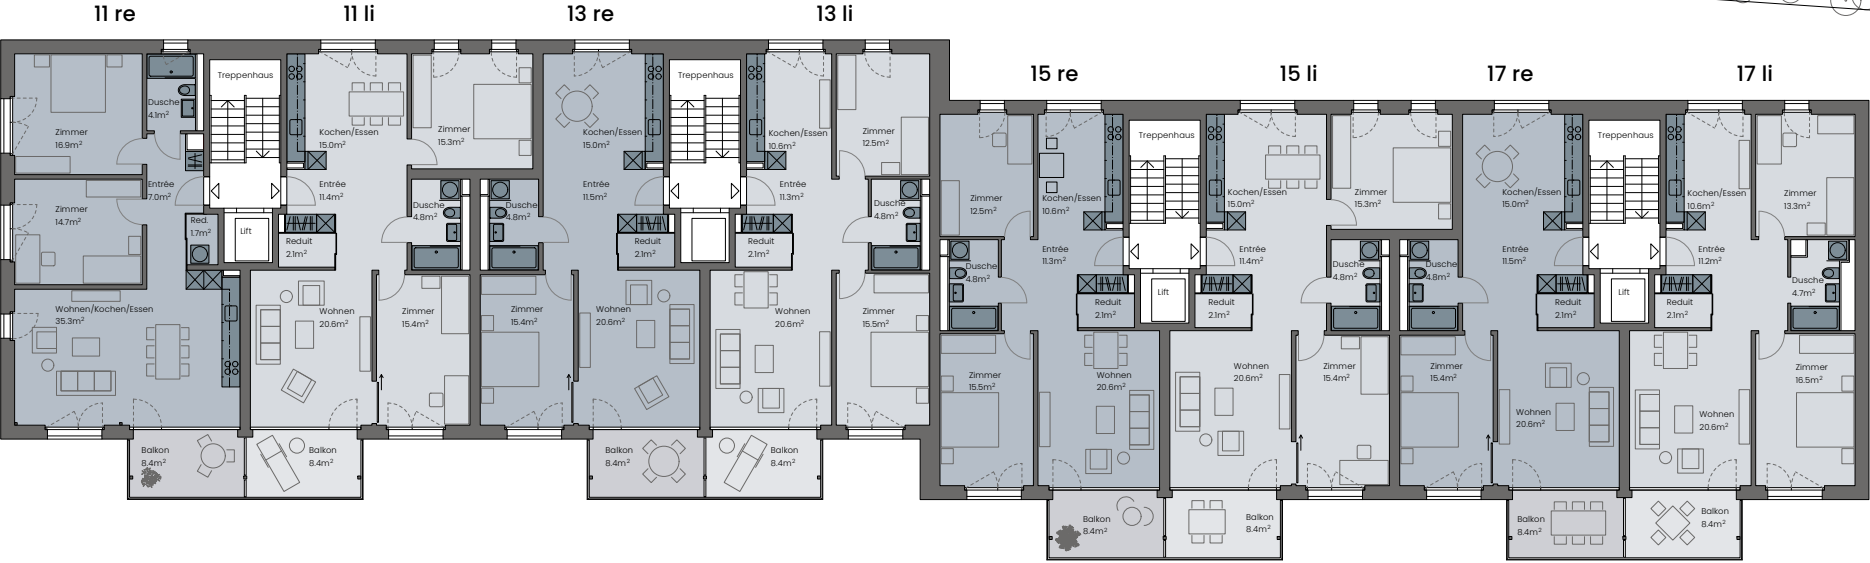


Zeile 1

Zeile 2

Zeile 3


Zeile 4

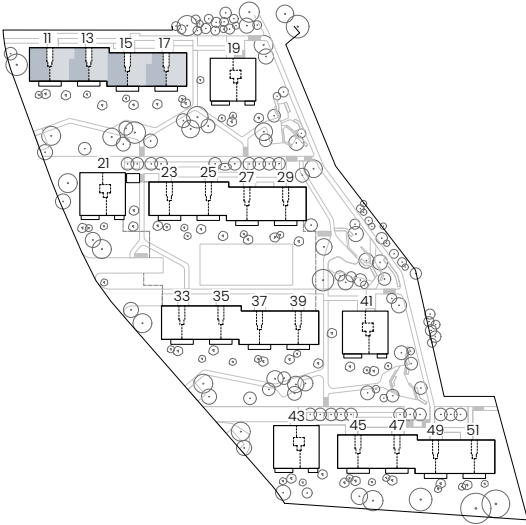

Wohnung	11 re	11 li	13re	13 li	15 re	15 li	17 re	17 li
Aufstockung	010.402	010.401	020.402	020.401	030.402	030.401	040.402	040.401

Zeile 1
Übersicht Wohnungen Eingang 11 – 17 Aufstockung

 Masstab 1:250




Zeile 1

Zeile 2

Zeile 3

Zeile 4

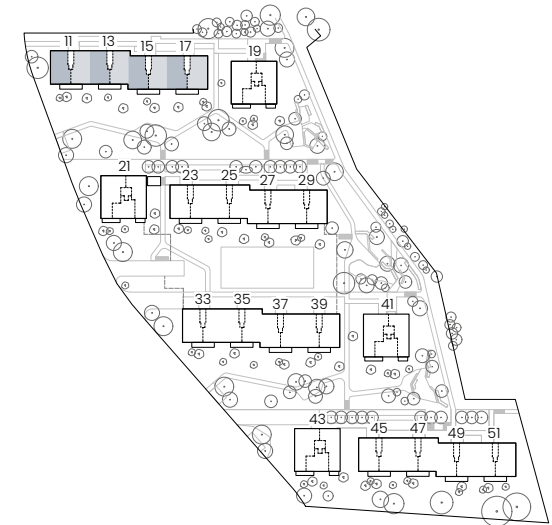


Wohnung	11 re	11 li	13 re	13 li	15 re	15 li	17 re	17 li
EG	010.002	010.001	020.002	020.001	030.002	030.001	040.002	040.001
1.OG	010.102	010.101	020.102	020.101	030.102	030.101	040.102	040.101
2.OG	010.202	010.201	020.202	020.201	030.202	030.201	040.202	040.201
3.OG	010.302	010.301	020.302	020.301	030.302	030.301	040.302	040.301


Zeile 1

Übersicht Wohnungen Eingang 11 – 17 EG – 3.OG


Masstab 1:250

 0 2 5 10




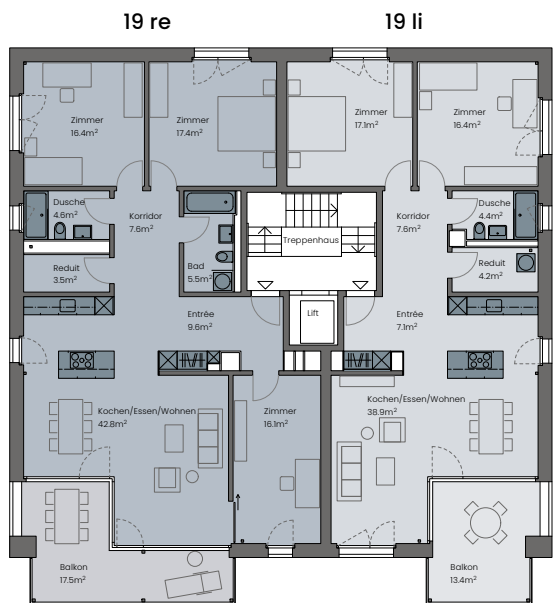



Wohnung	19 re	19 li
Aufstockung	050.602	050.601

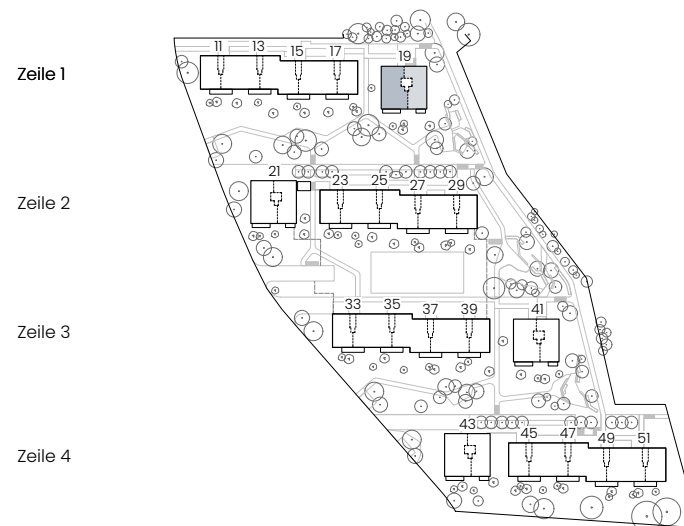


Zeile 1 Übersicht Wohnungen Eingang 19 Aufstockung

  Massstab 1:250



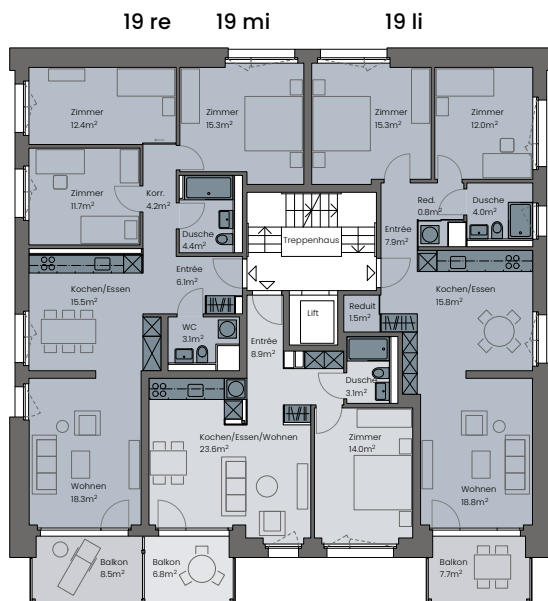

Wohnung	19 re	19 mi	19 li
EG	050.003	050.002	050.001
1.OG	050.103	050.102	050.101
2.OG	050.203	050.202	050.201
3.OG	050.303	050.302	050.301
4.OG	050.403	050.402	050.401
5.OG	050.503	050.502	050.501

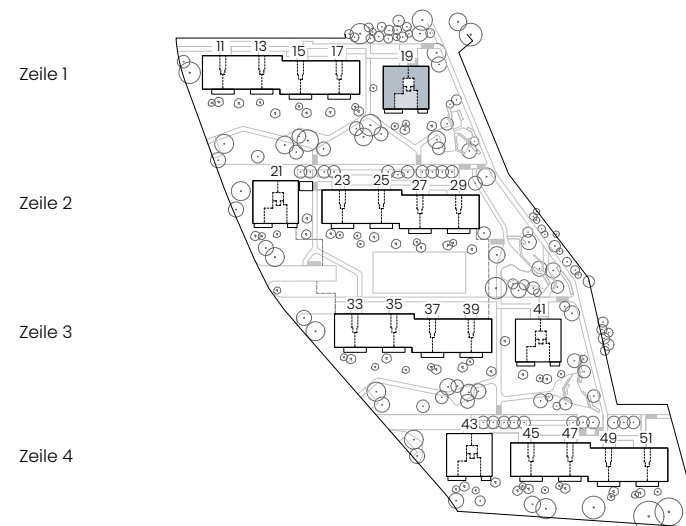

Zeile 1

Übersicht Wohnungen Eingang 19

EG – 5.OG

Massstab 1:250

